



# DUSTLESS STABILIZATION METHOD FOR DAMAGED PAINT

This procedure outlines the 3-Step Stabilization Method used in order to meet the work specification of not disturbing damaged, flaking paint (no dust):

## Step-1

Spray mist SE-110 Penetrating-Stabilizer onto the area to be stabilized (wet color is bluish-white). Allow the SE-110 to soften the old paint (3 to 10 minutes).




## Step-2

Apply some additional SE-110 and work this into damaged areas, corners and edges (use brush or roller).



## Step-3

Spray apply balance of SE-110 and allow to dry clear before applying SE-120 Protective-Skin (topcoat).

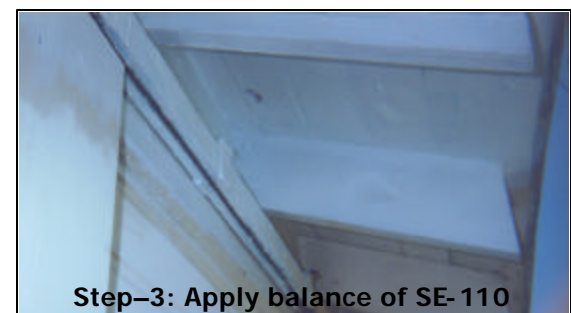

(pictures from Fort Ord, CA)

Copyright © 2001 SAFE Encasement Systems. All rights reserved

SAFE Encasement Systems ~ 7860 Dana Point Ct. ~ Las Vegas, NV 89117-1927

Phone: (888) 277-8834 or (702) 360-6111 ~ Fax: (888) 277-8835 or (702) 360-5827

[www.safeencasement.com](http://www.safeencasement.com)